

## INSTALLATION AND OPERATION INSTRUCTIONS

IN=EL01 ICONIC #5 Remote

### SAFETY PRECAUTION

1. Read the instructions before installation and operation.
2. The related wiring should be installed by a qualified electrician.
3. **To comply with AS/NZS 60335.1, all Iconic Fan Company remote controls must be installed with an isolation switch (as per the Installation Wiring Instructions in the Iconic Fan Company Installation Guide).**
4. Before installing the receiver, please disconnect source of electrical power to ceiling fan or switching off the circuit breaker.
5. This unit is to be used with AC240V, 50/60Hz power supply only.
6. To reduce the risk of fire or electric shock, do not use the fan with any solid state speed control device or control fan speed with a full range dimmer switch.

### INSTALLATION OF RECEIVER

**CAUTION:** INCORRECT WIRE CONNECTION WILL DAMAGE THIS RECEIVER

- A. Disconnect source of electrical power to ceiling fan by removing fuse or switching off circuit breaker.
- B. Lower ceiling fan canopy from the mounting bracket.
- C. Disconnect the existing wiring between ceiling fan and supply at electrical outlet box.
- D. Slide the receiver into mounting bracket and make sure the antenna rests outside of the bracket (Refer to Figure 1).
- E. Using the provided wire nuts, connect the wire as shown on the following diagram (Refer to Figure 2).
- F. Re-install the canopy on the bracket.

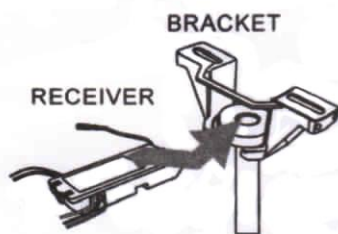 


Figure 1

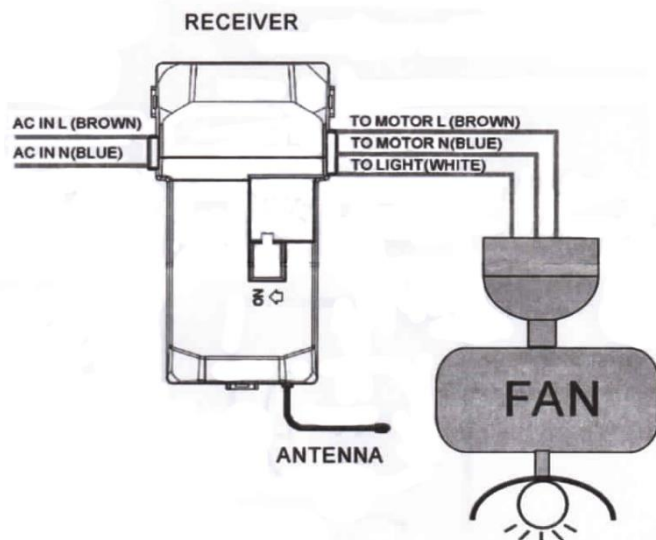 


Figure 2

## PROGRAMMING THE REMOTE

 
Step 1: Insert a CR2032 3V battery (provided) into the remote transmitter. The positive sign (+) should be facing towards you.

Step 2: Turn on the power for the fan via the isolation switch (**Note:** Individual fans require individual isolation switches and each remote will need to be programmed separately).

Step 3: Immediately (within 2 seconds) after switching on the isolation switch, press and hold the FAN OFF button on the remote transmitter for more than 10 seconds. The fan will commence two sets of clicks (5 clicks in the first set, 4 clicks in the second set). Release the FAN OFF button after the second set of clicks has concluded.

Step 4: The user can now operate the fan with the remote transmitter.

### Transmitter

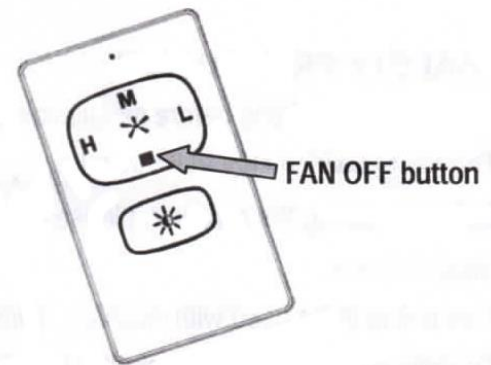

**NOTE: Learn function is only available immediately after turning on the power for the fan. If user does not complete programming in time, please turn off the fan isolation switch and repeat from Step 2.**

## FUNCTIONS OF REMOTE TRANSMITTER

H : Press once to turn on fan at high speed

M : Press once to turn on fan at medium speed

L : Press once to turn on fan at low speed

■ (FAN OFF) : Press once to turn off fan

\* (LIGHT) : Press once to toggle light on or off

